

BULLSEYE

INSTALLATION

INSTRUCTIONS

Chevy Silverado 2500 Grill Mounts



The following instructions are a process made from the designer himself. They can be used as a guide to install the following mounts onto your Chevy Silverado 2500.

These instructions are not the final copy of instructions and we will further make more professional instructions for better understanding of how to install your purchase.

Please let us know if we can better assist you by E-mailing us at Sales@bullseyeproducts.com.au or by Calling us on (03) 9737 6384



Step 1:
Unbolt and remove the bonnet latch under your chevy bonnet.


This will allow for the removal of the above grill's bucket vent. Once removed, keep in a safe place for re-attachment.







Step 2:
Remove the rubber clips holding the above grill bucket vent in place using a soft plastic crow bar or similar tool.


Remove with care as they can be irreplaceable.

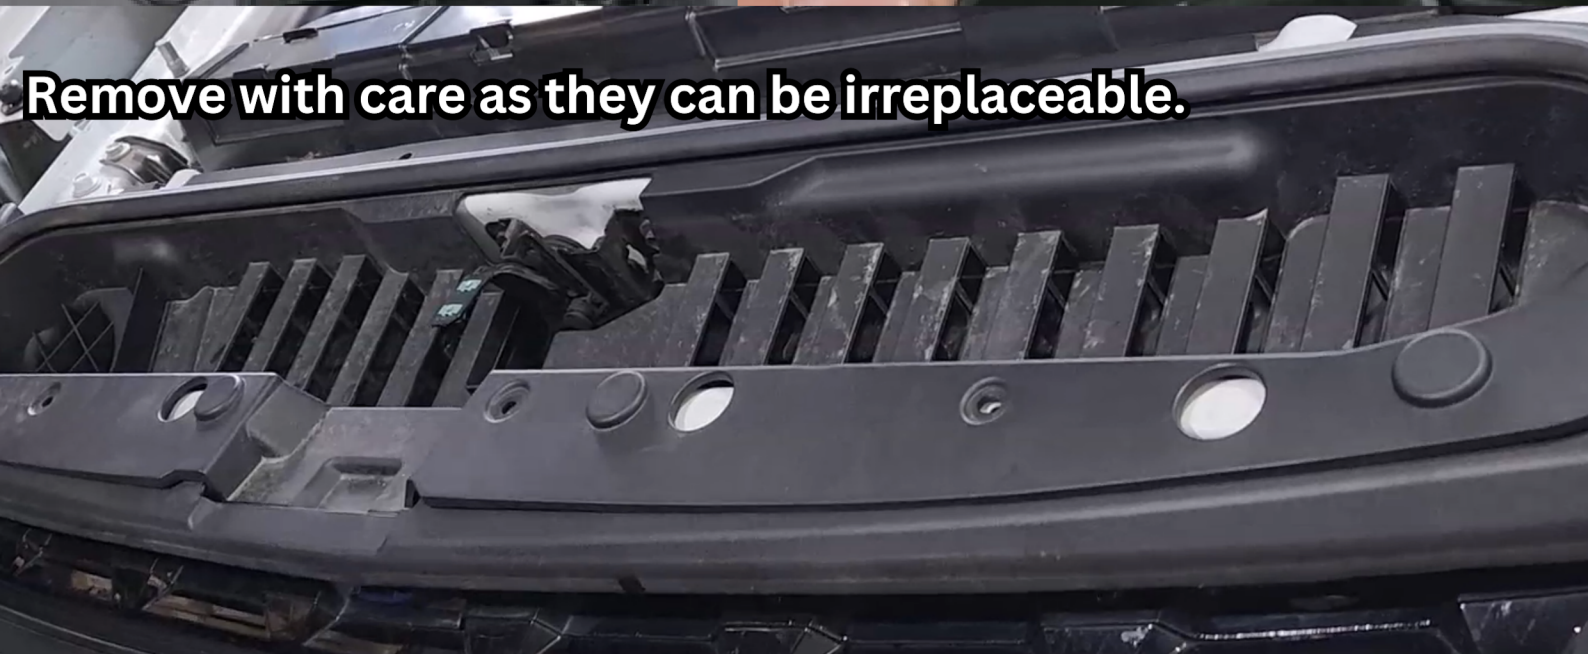

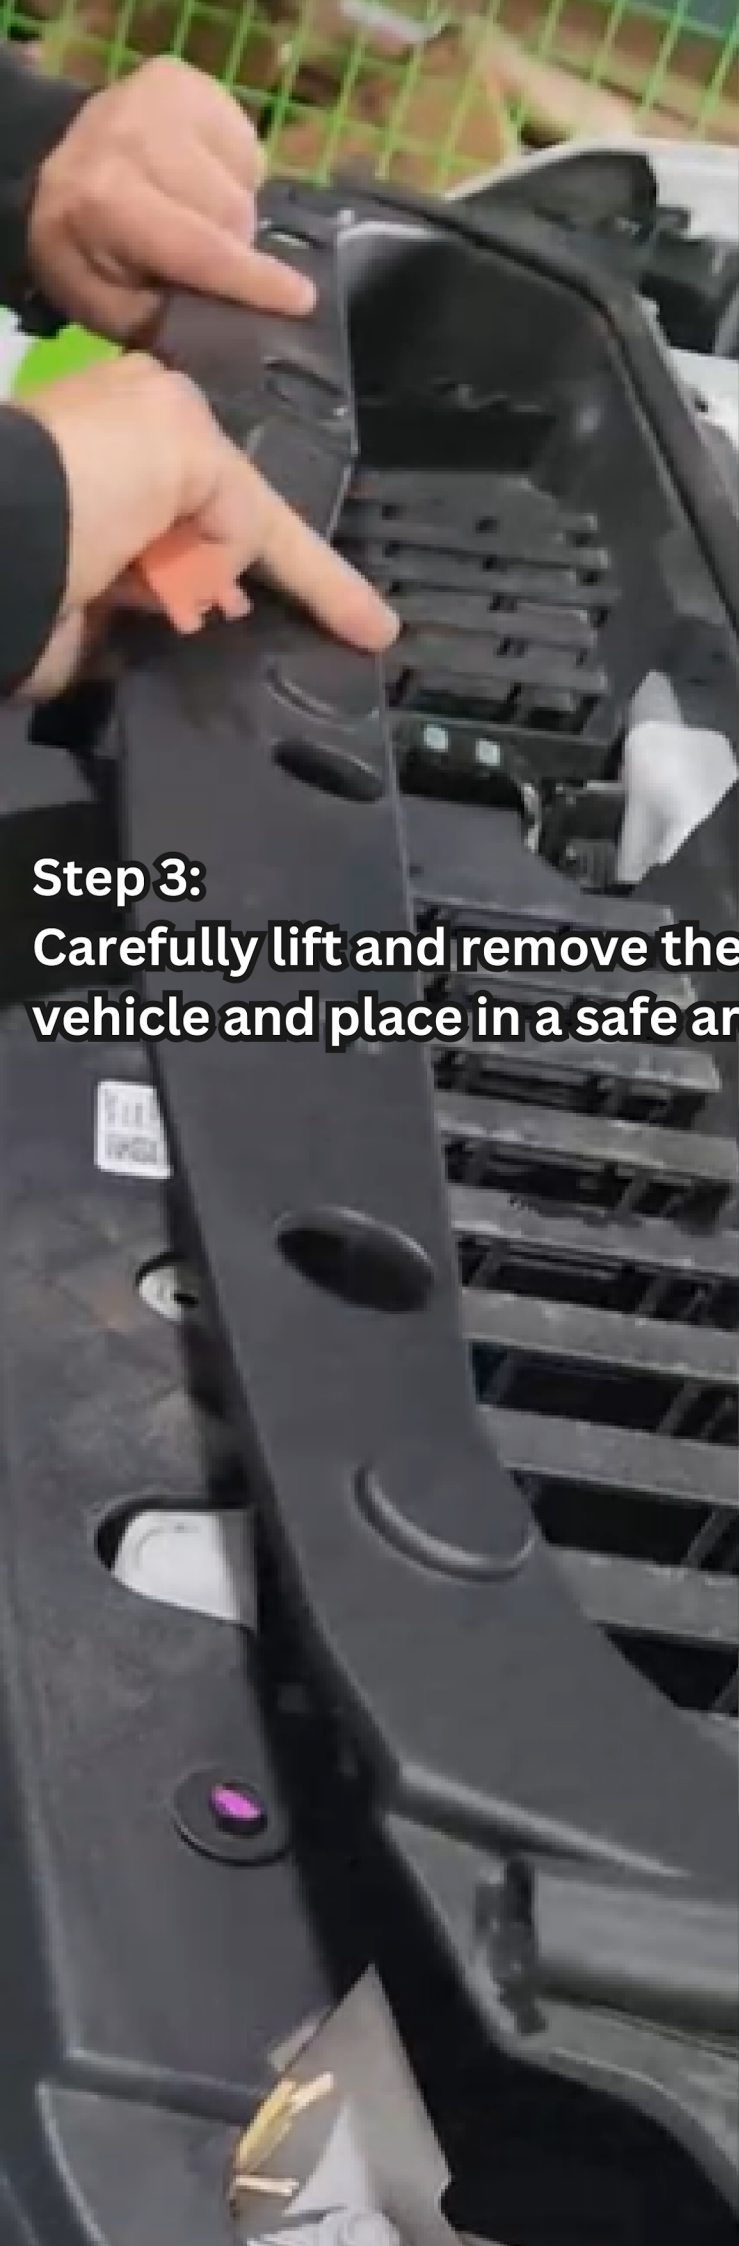


Step 3:
Carefully lift and remove the above grill bucket vent from the vehicle and place in a safe area.

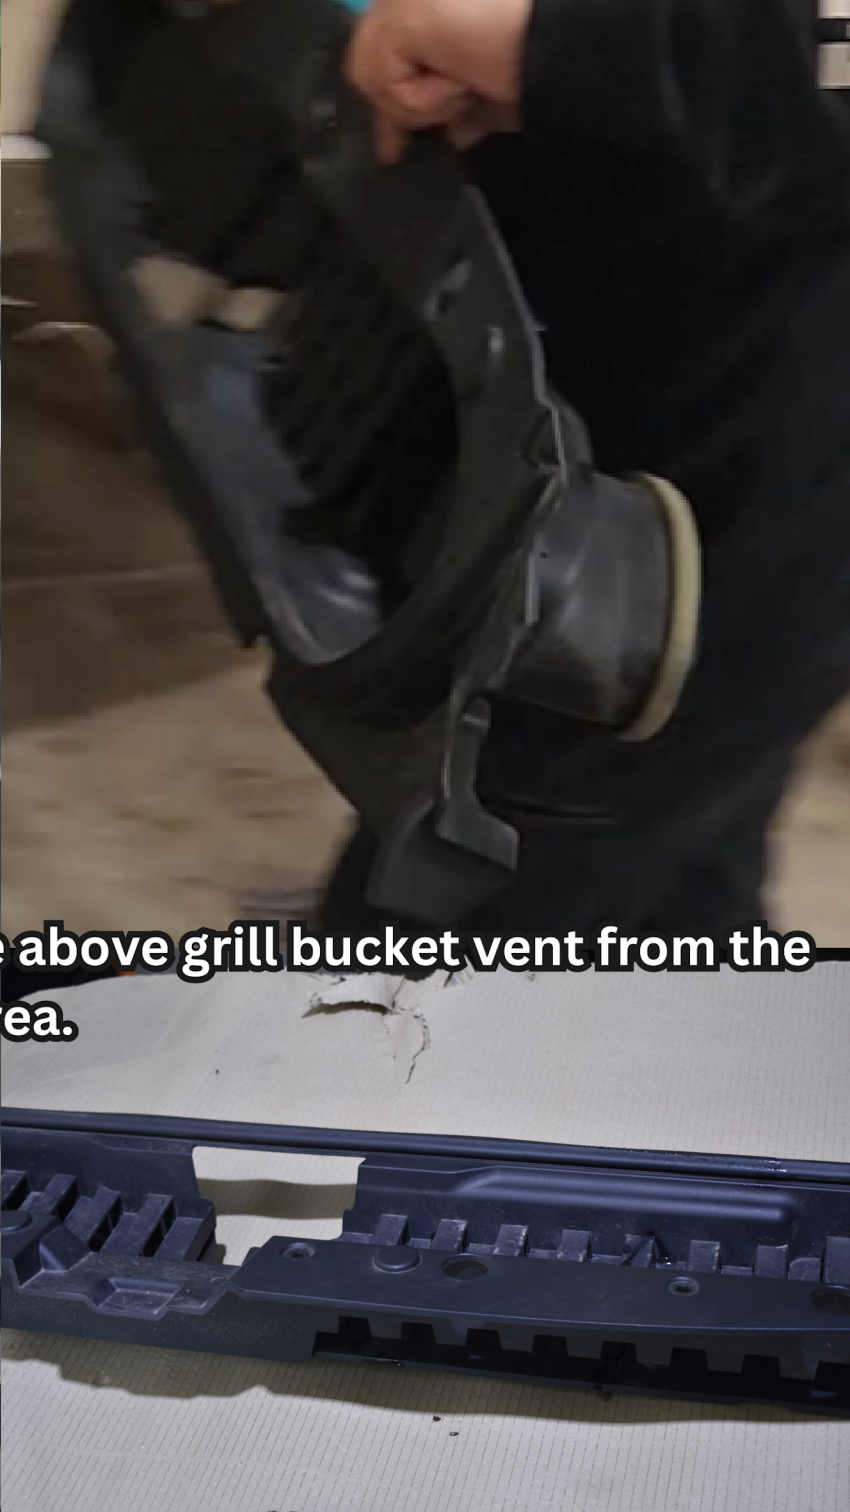

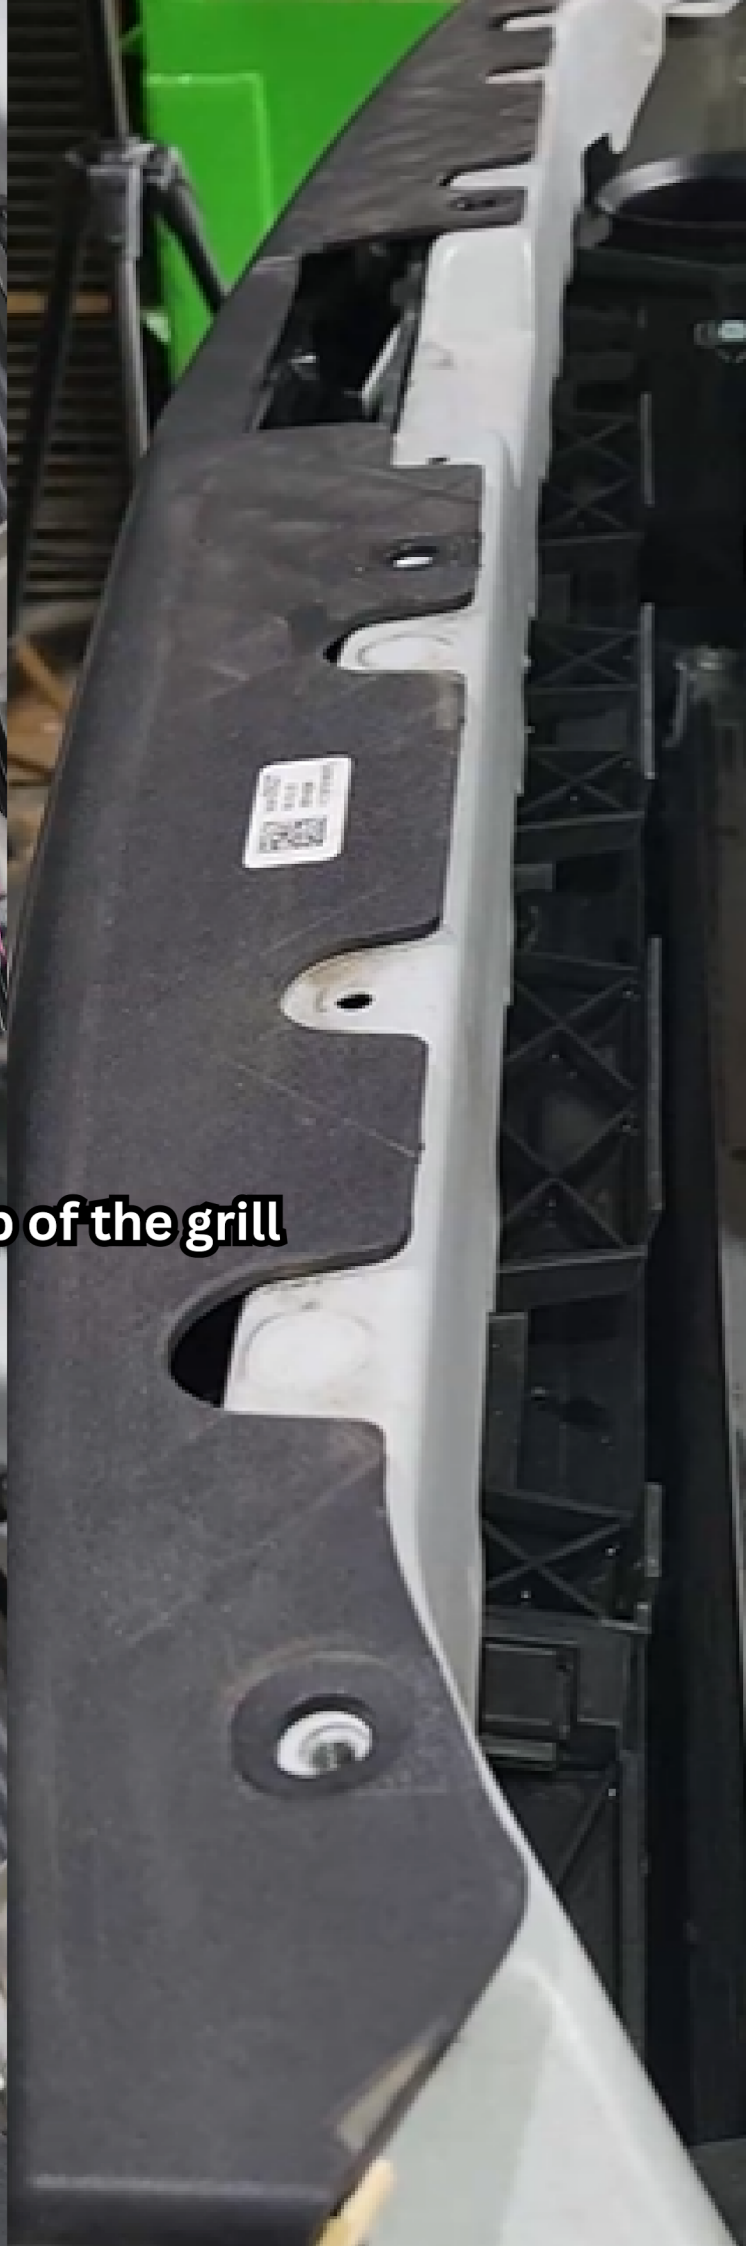

Step 4:
Remove the bolts from the top of the grill

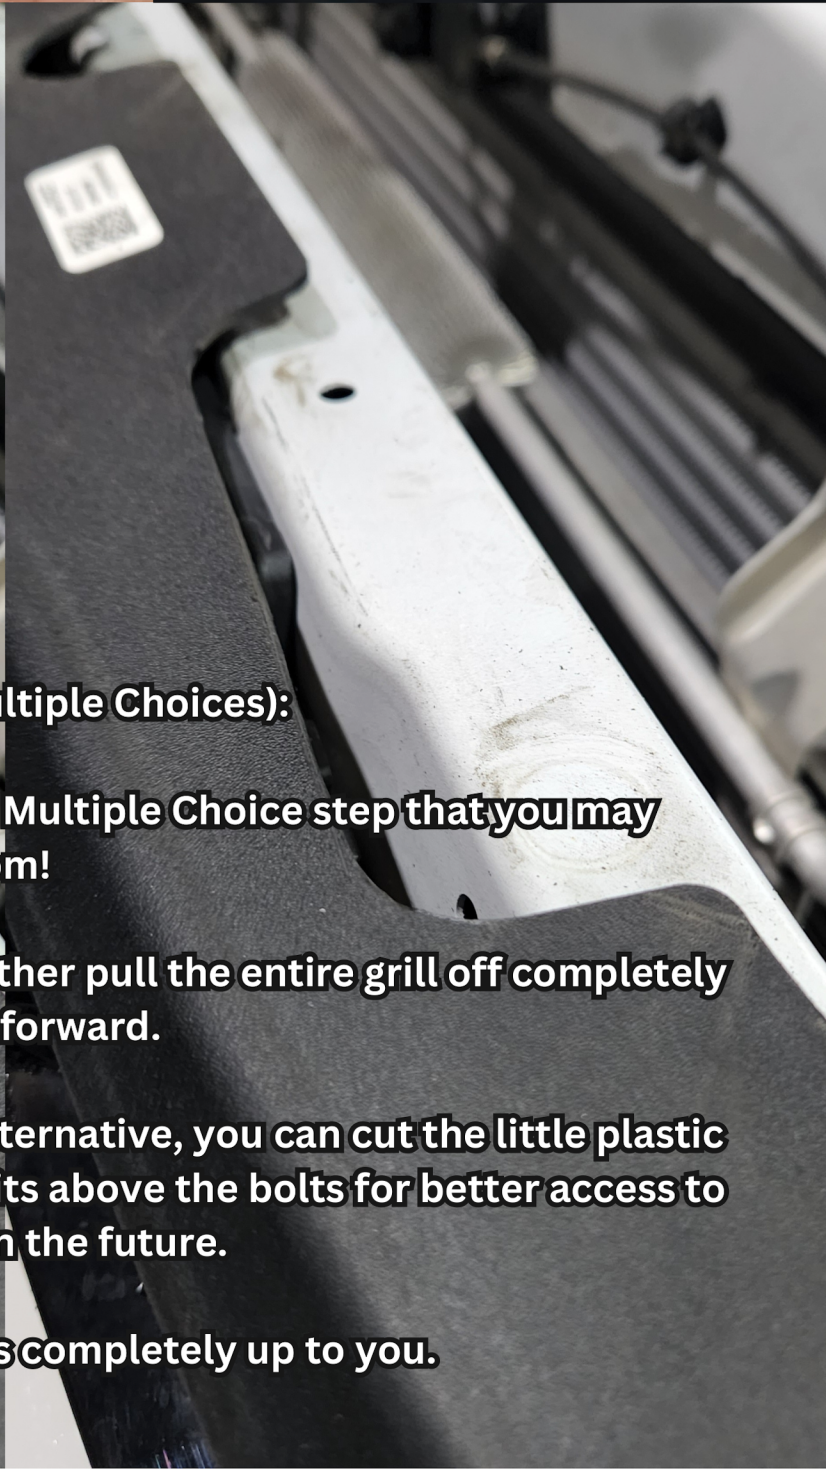

Step 5 (Multiple Choices):

Step 5 is a Multiple Choice step that you may choose from!

You can either pull the entire grill off completely or slightly forward.


Or as an alternative, you can cut the little plastic flap that sits above the bolts for better access to the bolts in the future.

This step is completely up to you.



Step 6:

LOOSEN the bolts that the grill mount will slot into. Do not take them completely off as there is no need to remove them.

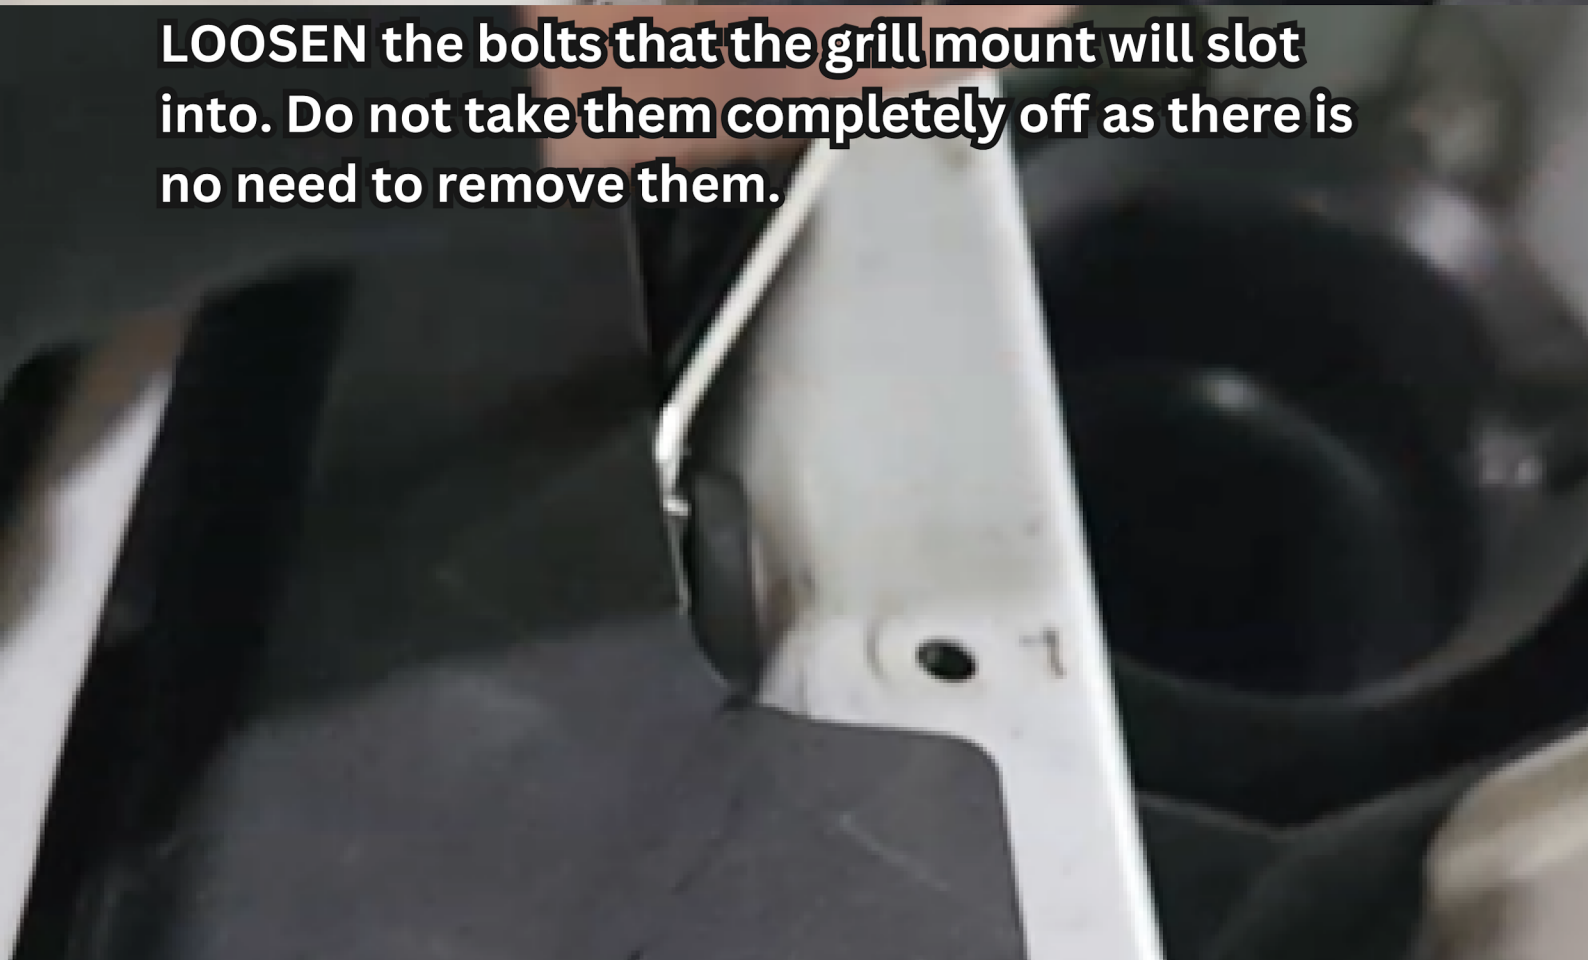





Step 7:

Apply tape or other protective material that can be later removed, onto each end of the grill.

This ensures that the grill will not be scratched or damaged in the process of slotting in the mounts.

The mounts will need to be fed through the grill on an angle for them to be placed within the grill. They will need to be handled upwards until the two slots on the mounts slide in behind the loosened bolts.

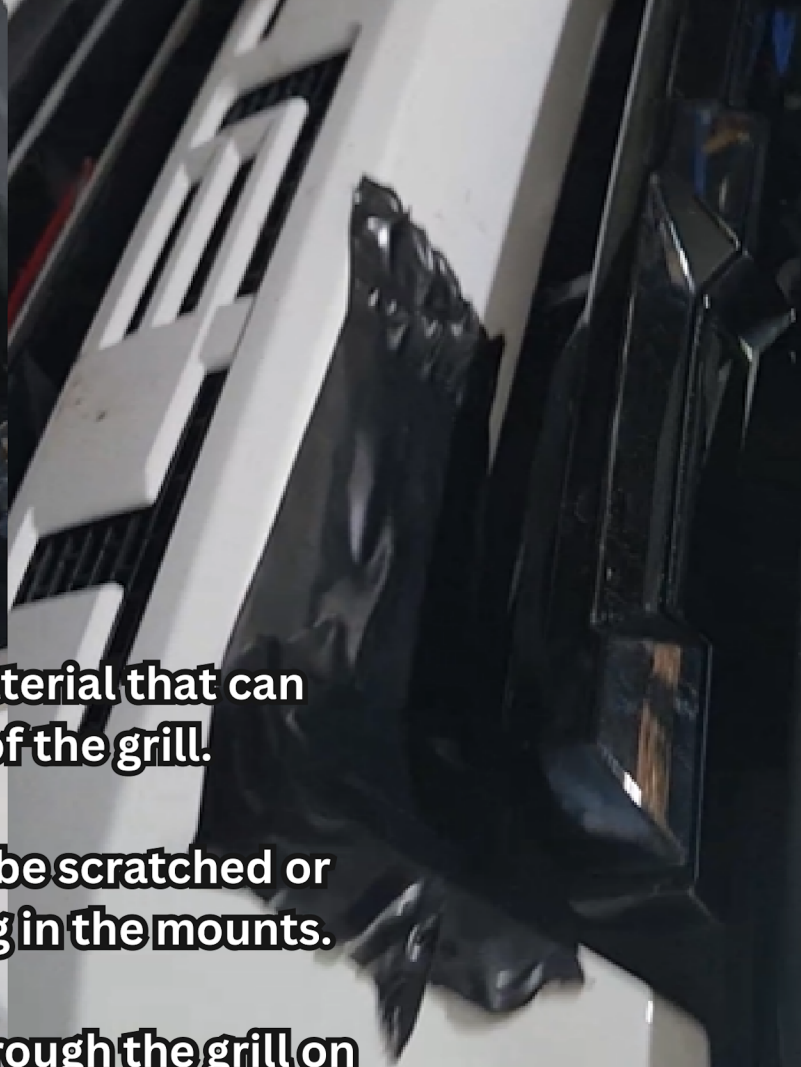




Step 8:

Once the mounts have been installed behind the bolts, tighten the bolts firmly to keep the mounts from moving.



Step 9:



Feed the plug from the light bar through the grill and proceed to line the light bar with the mounts.

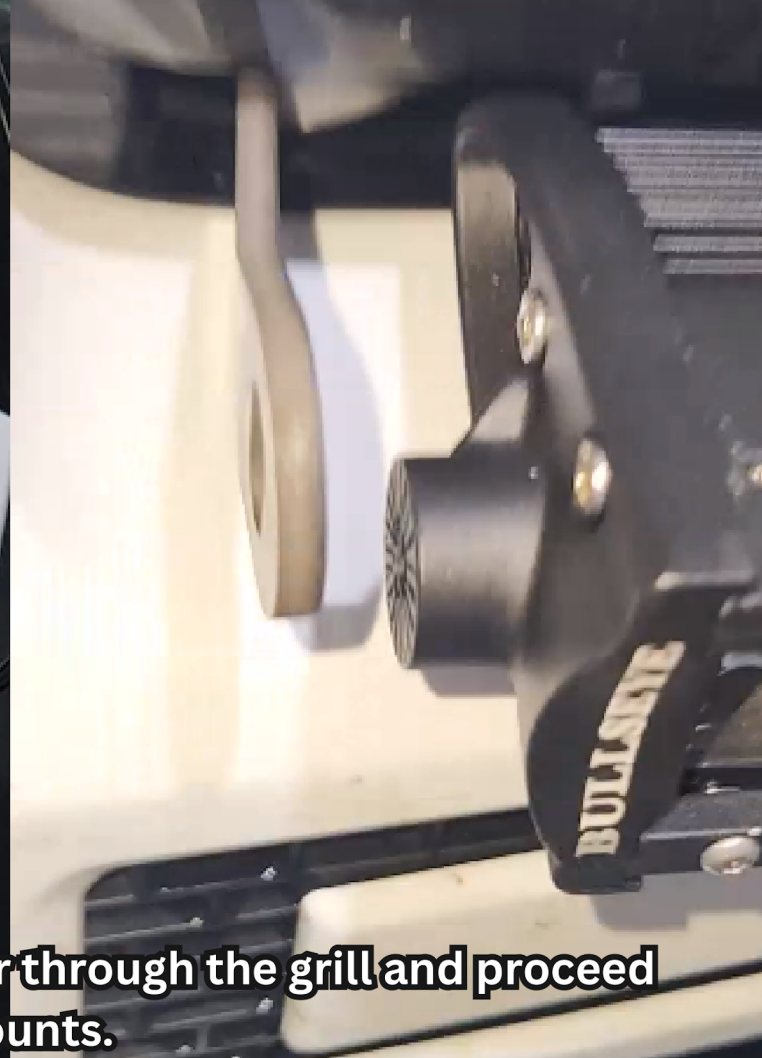

A rubber washer has been provided as well as two bolts for mounting the light bar. The rubber washer was not displayed in the images but should sit in-between the light bar and mounts.

Screw the bolts in and tighten them firmly.



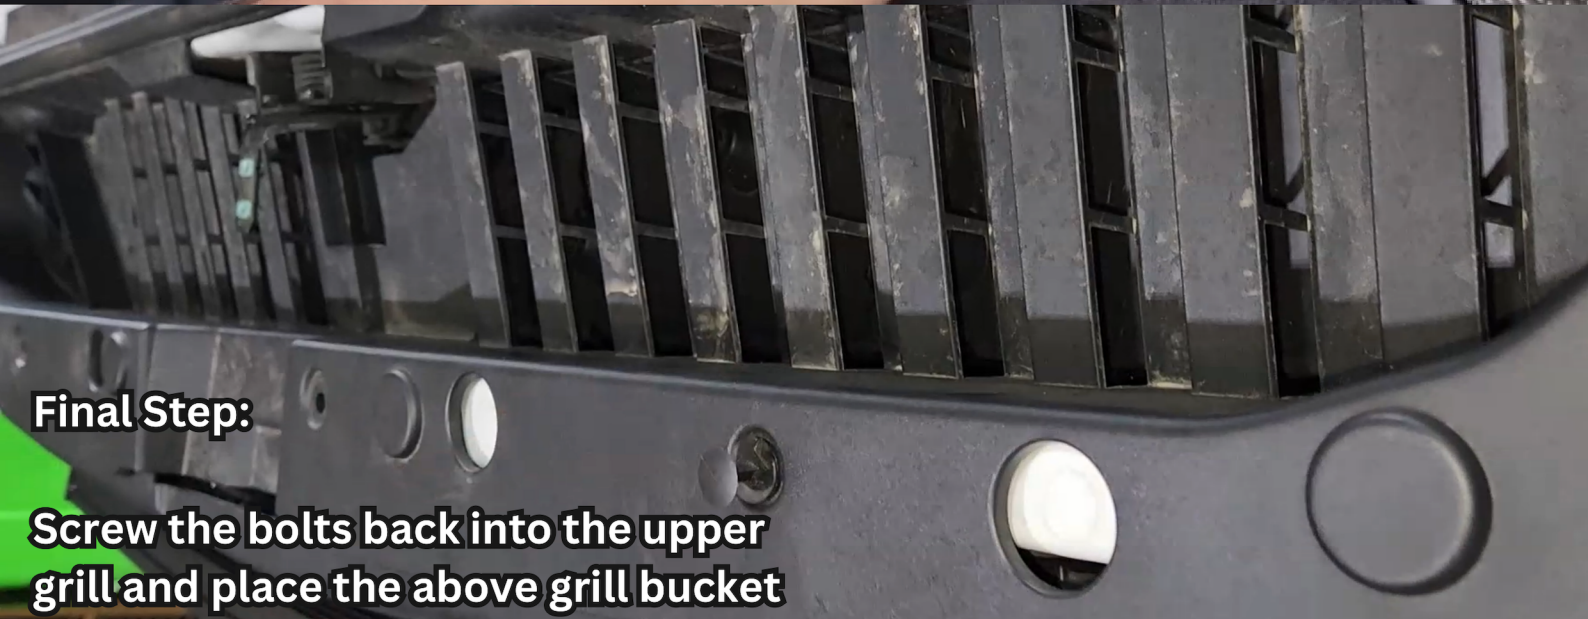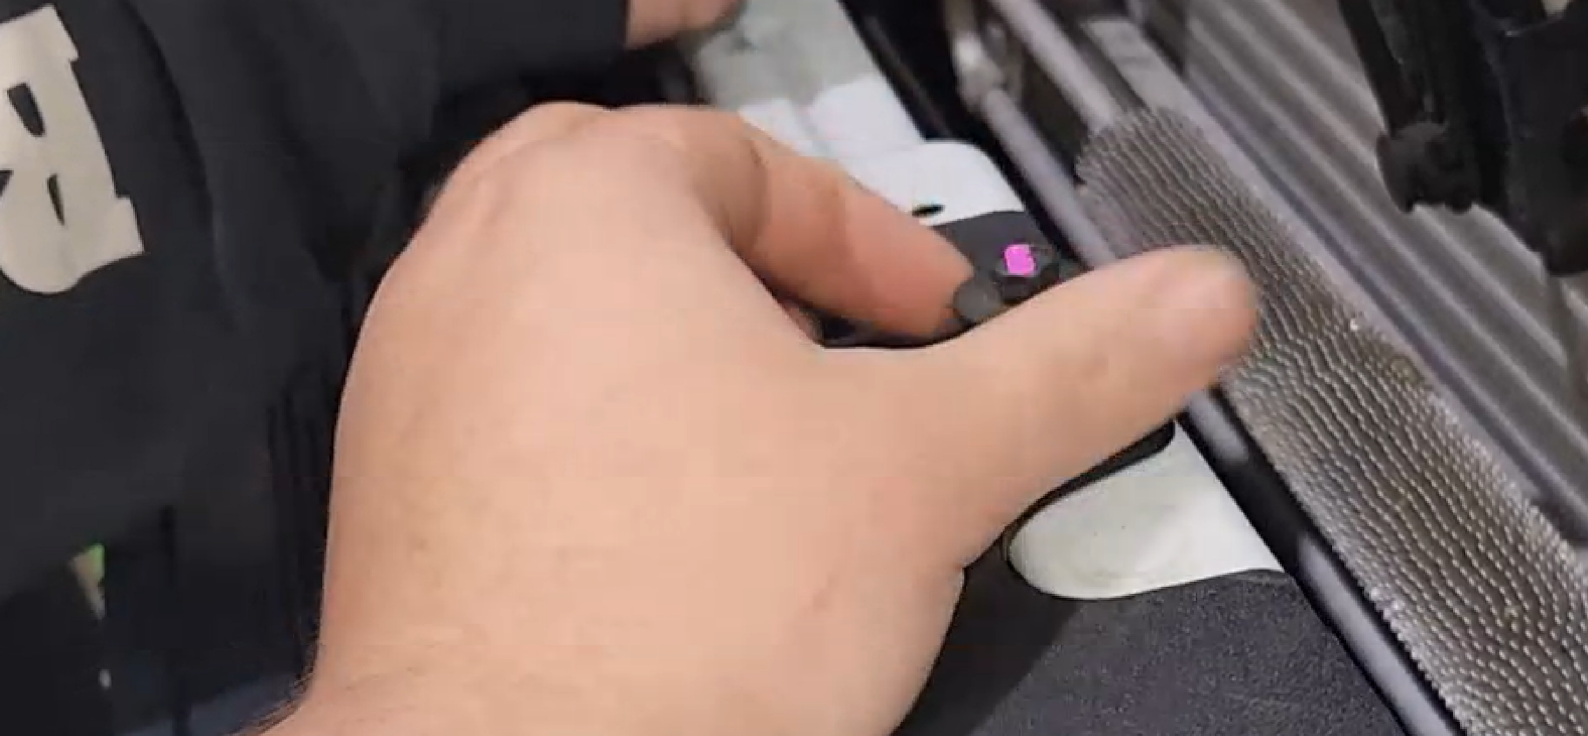

Final Step:

Screw the bolts back into the upper grill and place the above grill bucket vent back onto your engine bay.

Place the plastic clips back in to the above grill bucket vent and slightly hit them back in.

Re-Screw the Bonnet Latch back on and you've completed the Install.

